

SOLVEIG

SV Monteringsanvisning | EN Installation instruction



Innehåll | Contents


1. Dimensioner Dimensions	2
2. Monteringsordning Assembly order	3
3. Fastbultning (under mark) Anchoring (below ground)	6

Appendix



A. Revisionsförteckning Revision list	8
---	---

1. Dimensioner | Dimensions


Rak modul | Straight module

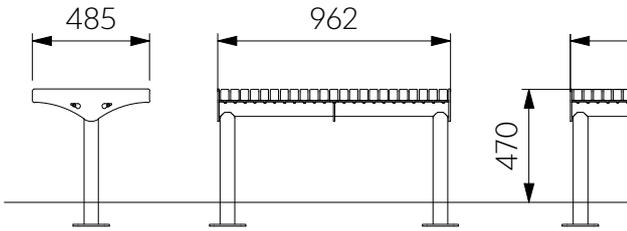


Modul i radie 45° | Module radius

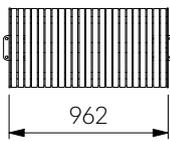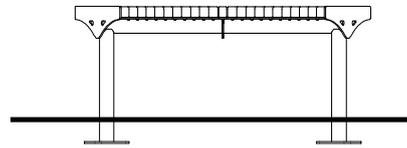



Bas modul

 

Mitt modul

 


Slut modul

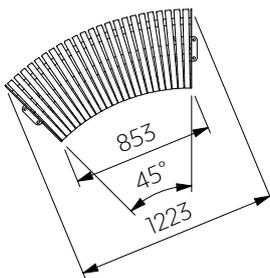 

Bas modul






Mitt modul

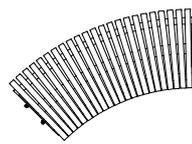


Slut modul - vänster



Slut modul - höger

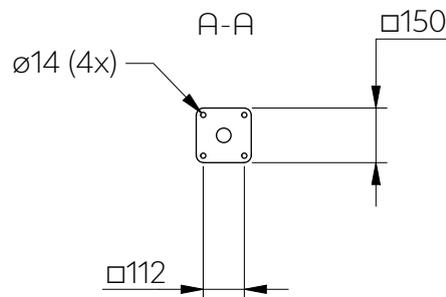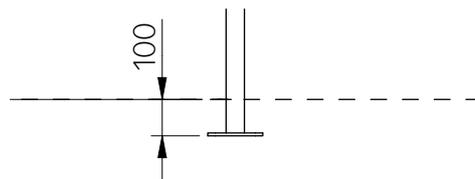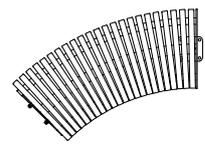


2. Monteringsordning | Assembly order

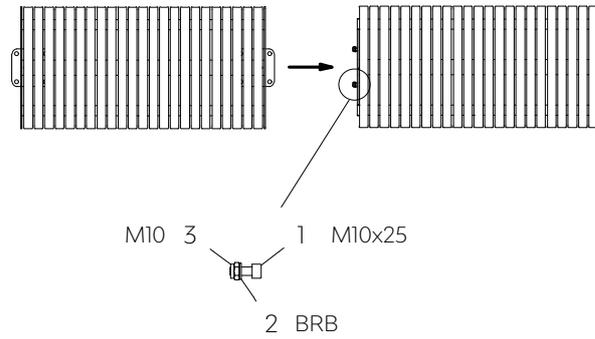


Rak modul | Straight


Alternativ 1. Bas + X (Mitt + Bas)

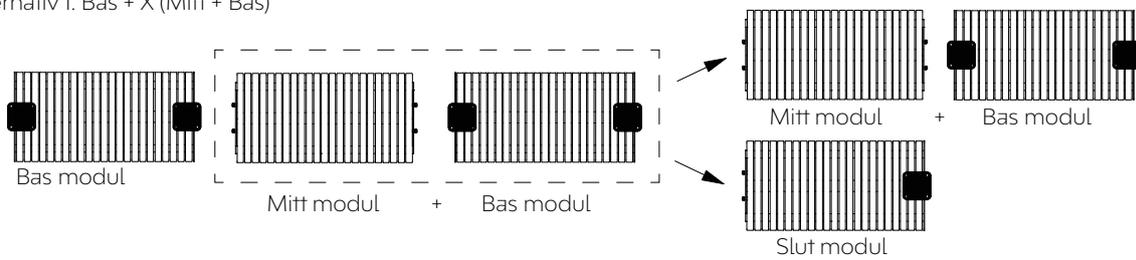


Alternativ 2. Bas + X (Slut)

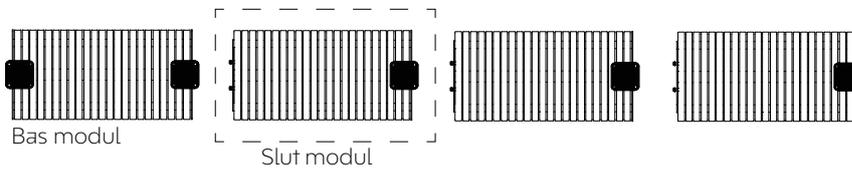


Exempel

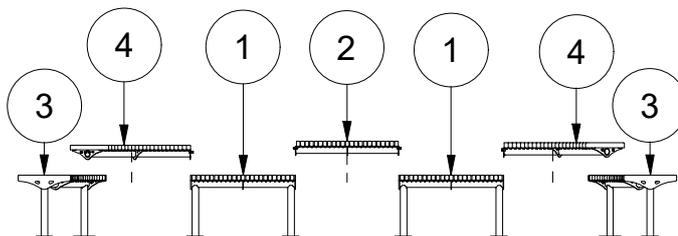


- 1. Bas modul - rak
- 2. Mitt modul - rak
- 3. Bas modul - radie
- 4. Mitt modul - radie


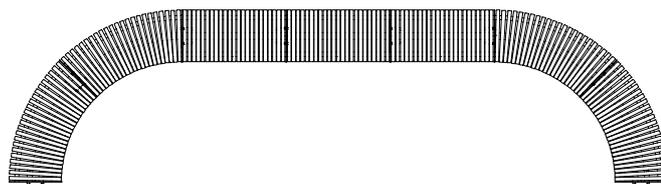


Modul i radie 45° | Module radius







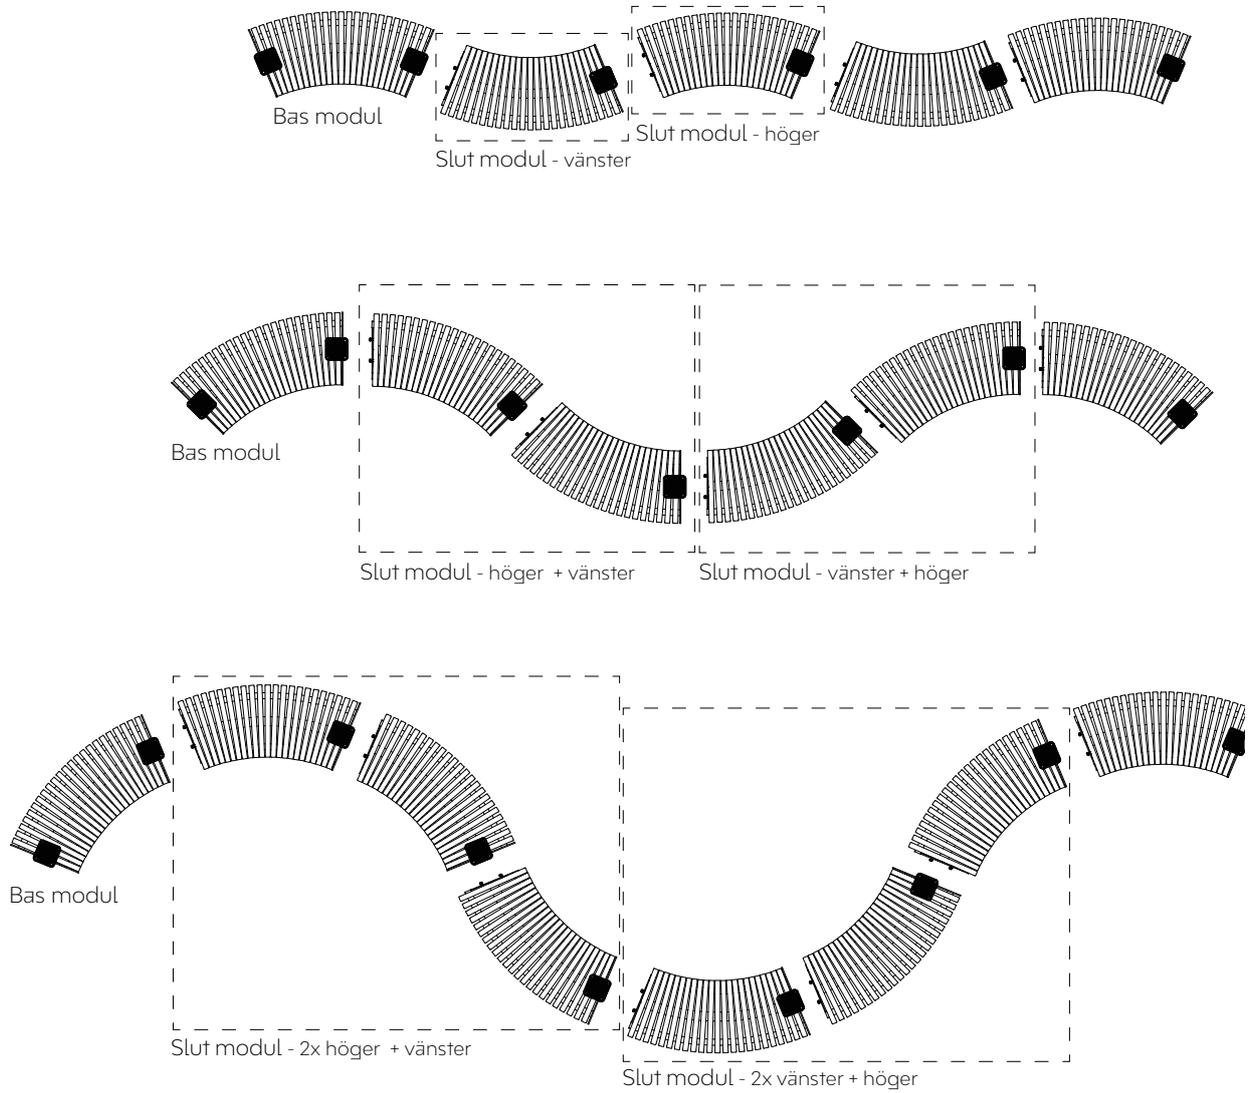



Exempel

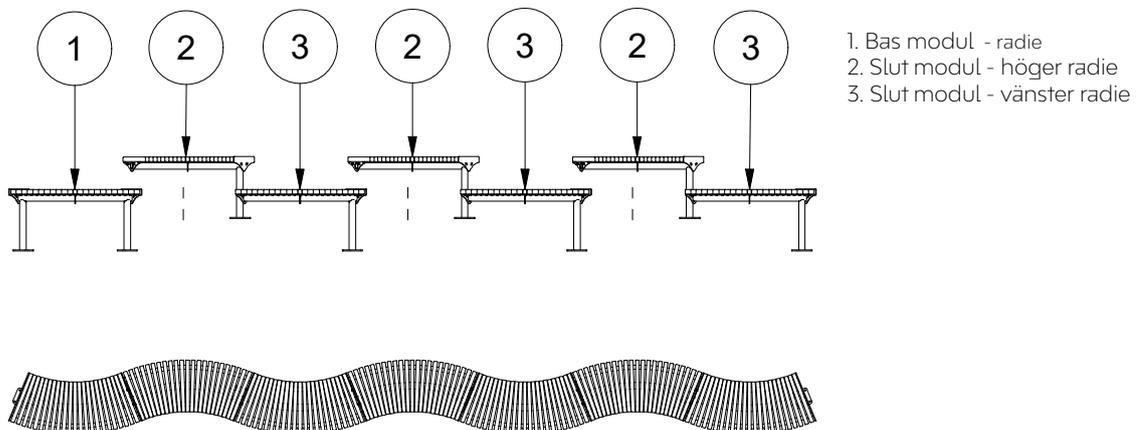

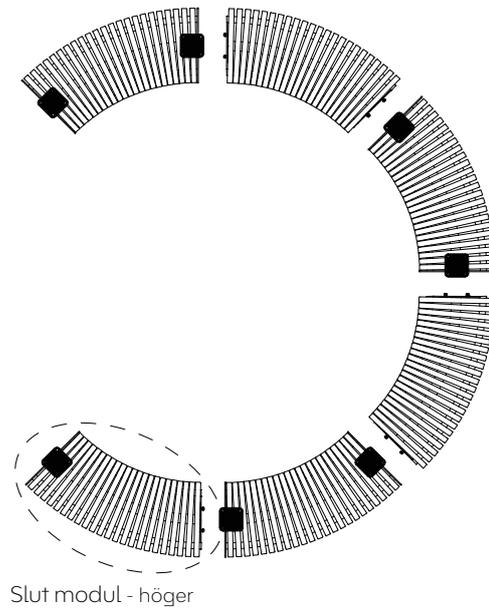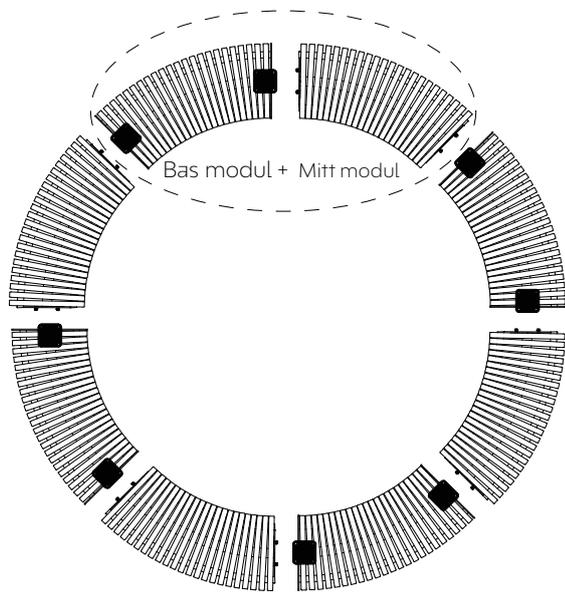


3. Alt 1. Fastbultning (under mark) | Anchoring (below ground)

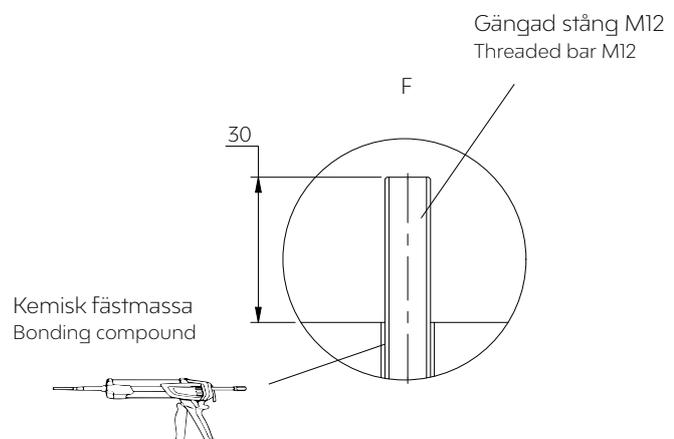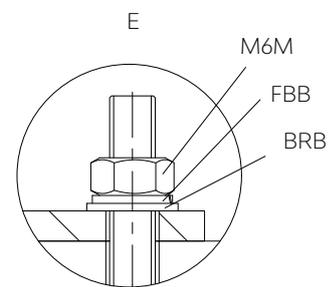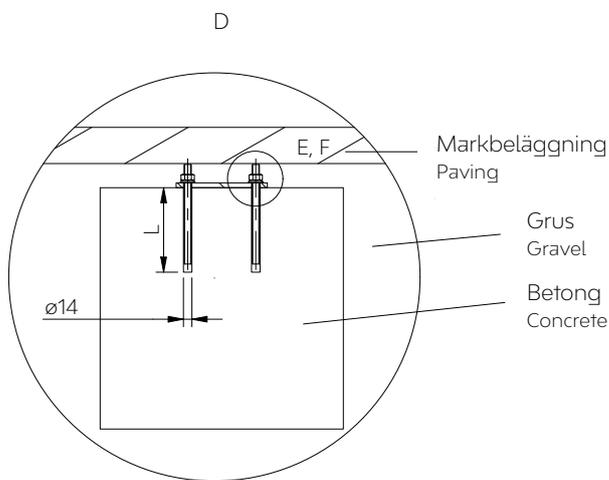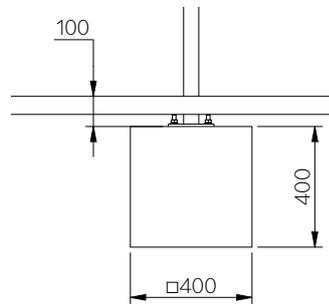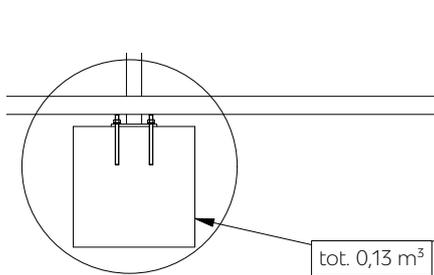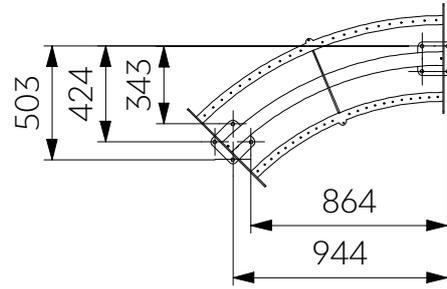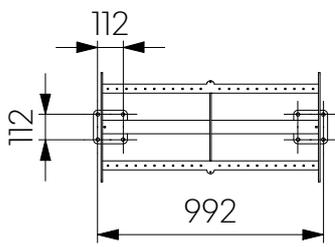


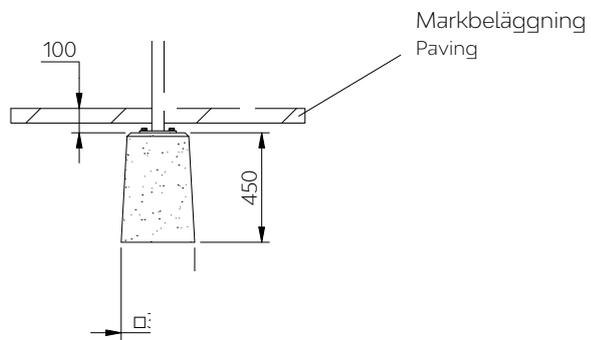

A

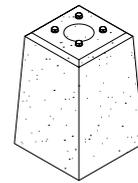

Betongfundament cc 112

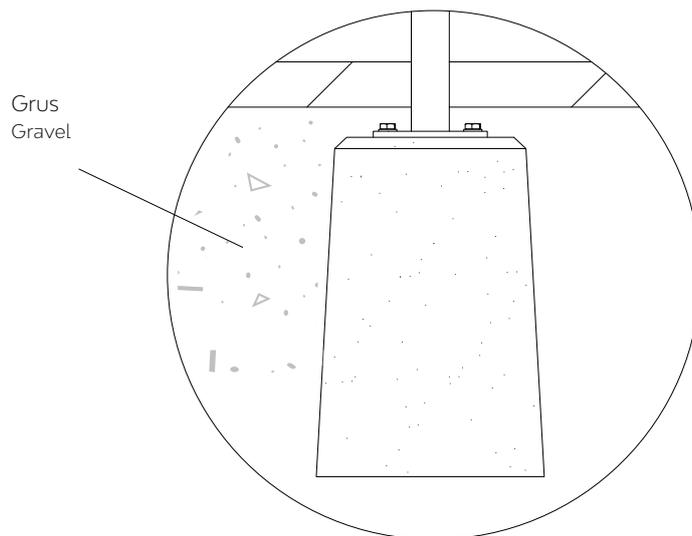

A. Revisionsförteckning | Revision list

#	Utgåva Edition	Beskrivning	Description
1	2026-03-12	Första utgåva	Original edition